



# DOSATRON®

WATER POWERED DOSING TECHNOLOGY



Scan the QR code to watch our DM11F Troubleshooting video.

800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)


Proper protection, such as gloves, eye wear, and aprons, are recommended when disassembling a Dosatron.

## DM11F Troubleshooting - Part 2B


**This DM11F Troubleshooting will cover: The medicator is not clicking.**



**Step 1:** If you install the medicator and it still doesn't click, remove the eleven nuts and bolts around the lid.

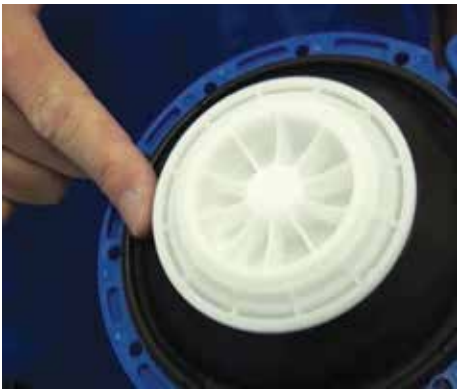

**Step 2:** Inspect the black rubber diaphragm (PJDI127). If it has damage or bleeds off on your fingers, replace it.

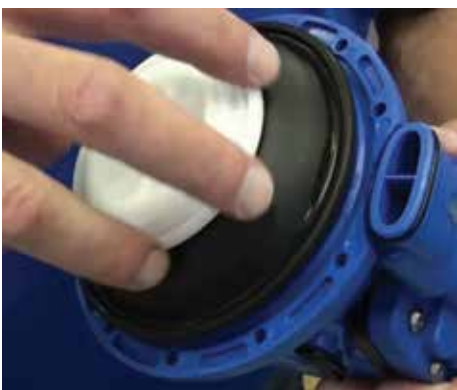

**Step 3:** To remove, unscrew the diaphragm assembly and discard. Install the new part and hand tighten.



# DOSATRON®

WATER POWERED DOSING TECHNOLOGY

800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)

Proper protection, such as gloves, eye wear, and aprons, are recommended when disassembling a Dosatron.

## DM11F Troubleshooting - Part 2B



**Step 4:** Pull the connector up. This will ensure that the thick outside edge will be in the groove.



**Step 5:** Position the lid on top of the housing.



**Step 6:** Install the eleven nuts and bolts, tightening in a star pattern.

**Note:** To watch the video go to Dosatron's DM11F video page: <https://www.youtube.com/watch?v=Xw0aY3WfLXk> or the YouTube Channel: [www.youtube.com/user/DosatronIntl](http://www.youtube.com/user/DosatronIntl)

Dosatron International, Inc.  
2090 Sunnydale Blvd. • Clearwater, FL 33765  
800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)